UTN Scannerserver
myUTN-130
Quick Installation Guide

Overview [en]

This Quick Installation Guide provides a description of the installation of the myUTN-130. It contains the following information:

- **General Information**
- **Safety Regulations**
- **Hardware Installation**
- **Software Installation**
- **Getting Started**
- **Configuring the UTN server**

Please note the table of contents on page 3. Should you have any further questions, please contact our support hotline.

Überblick [de]

Dieser Quick Installation Guide beinhaltet eine Beschreibung der Installation des myUTN-130. Sie erhalten die folgenden Informationen:

- **Allgemeine Information**
- **Sicherheitsvorschriften**
- **Hardware-Installation**
- **Software-Installation**
- **Erste Schritte**
- **UTN-Server konfigurieren**

Beachten Sie das Inhaltsverzeichnis auf Seite 17. Falls Sie noch Fragen haben, kontaktieren Sie unsere Support-Hotline.

Monday - Thursday 8:00 a.m. to 4:45 p.m. and
Friday 8:00 a.m. to 3:15 p.m. (CET)

+49 (0)521 94226-44

support@seh.de

Date of Manufacture

The serial number includes the date of manufacture.
The serial number can be found on the type plate.

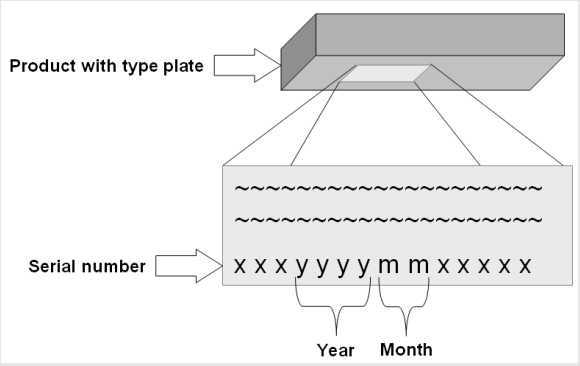

Table of Contents

General Information 4
Purpose 4
Scope of Supply 4
Technical Data 5
LED Display 6

Safety Regulations 7

Hardware Installation 8

Software Installation 9

Getting Started: SEH UTN Manager 10
Starting the SEH UTN Manager 11
Assigning an IP Address to the UTN Server 12
Adding the UTN Server to the Selection List 13
Connecting the USB Scanner to the Client 14

Configuring the UTN server 15

General Information

Purpose

The UTN server 'myUTN-130' allows you to access a non-network-ready USB scanner in the network. The USB scanner will be connected to the USB port of the myUTN-130. The access is controlled via the software tool 'SEH UTN Manager'.

The SEH UTN Manager is installed on all clients that are intended to access USB scanners in the network. The SEH UTN Manager shows the availability of all USB scanners in the network and establishes a connection between the client and the USB scanner.

The administration of the myUTN-130 is done via the 'myUTN Control Center'.

Scope of Supply

Please check the package content before getting started:

	UTN server	myUTN-130 (Scannerserver)
	Quick Installation Guide	The Quick Installation Guide provides a brief description of the installation of the myUTN-130. (This document)
	Power pack	External power pack

Technical Data

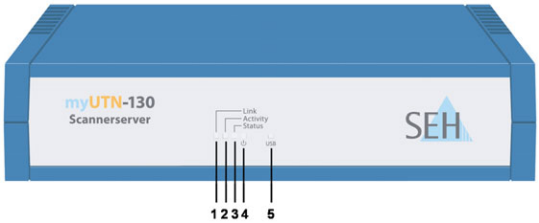

Front view

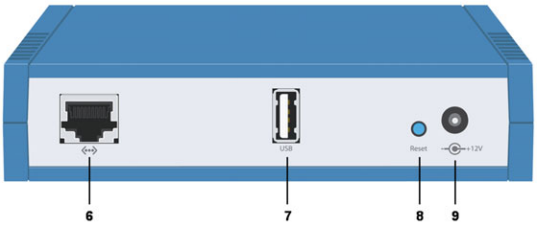

Rear view

1) Link LED (green)
2) Activity LED (yellow)
3) Status LED (green)
4) Power LED (yellow)
5) LED for the USB port (green/ orange)
6) Network connector (RJ-45) for 1000BaseT, 100BaseTX and 10BaseT
7) USB port for the connection of a USB scanner
8) Status/reset button
9) Connector for the included power pack

Properties	Values
Network connection logical: physical:	 - 10BaseT/100BaseTX/1000BaseT (IEEE 802.3) - RJ-45 (S/UTP Cat. 5)
Device connection	- 1 x USB scanner (via USB 2.0 HS)
Current input	- 300 mA @ 12 VDC (without load) - 600 mA @ 12 VDC (with full load on the USB port)
Operating environment	- Ambient temperature: 5 - 40 °C - Relative humidity: 20 - 80 %
Dimensions	- Width: 140 mm - Height: 32 mm - Depth: 99 mm - Weight: 140 g

LED Display

The LEDs of the UTN server provide information about its status.

LED	Action	Color	Description
Link	permanently on	green	Indicates an existing connection to the network.
	permanently off	-	Indicates that there is no connection to the network.
Activity	blinks at irregular intervals	yellow	Indicates the receipt of data packets.
Status	permanently off	-	If the activity LED blinks periodically at the same time, the BIOS mode is signalized.
	blinks 3 times	green	Indicates the assignment of a ZeroConfig IP address.
	blinks 2 times	green	Indicates the assignment of an IP address that does not correspond to 0.0.0.0 or that comes from outside the ZeroConf range.
Power	permanently on	yellow	Indicates that the device is powered.
	permanently off	-	Indicates that the device is not powered.
USB port	permanently off	-	No USB scanner is connected to the USB port.
	permanently on	green	A USB scanner is connected to the USB port.
	permanently on	orange	The USB scanner is connected to the USB port.

Safety Regulations

UTN server are network devices for use in office environments. The myUTN-130 is designed for the integration of USB scanners into TCP/IP networks.

Before starting the initial setup procedure and during the operation of the UTN server, please note the following safety regulations. Their purpose is to protect yourself and others from personal injuries, and avoid damage to the equipment.

- Read the documentation and make sure that your system meets the requirements listed therein.
- Avoid contact with humidity or liquids.
- The device must only be connected and operated if it is in perfect condition.
- Make sure that no-one steps on or stumbles over the cables.
- Do not connect a telephone cable to the RJ-45 connector. The RJ-45 connector may only be connected to SELV voltages. For the connection to the RJ-45 connector only S/UTP cabling (category 5 or better) may be used. The shielding must fit flushly to the connector.
- The device must only be operated using the power pack included in the package.
- Only use a certified USB cable (< 3 m) listed at www.usb.org.
- Do not open the housing. Do not put objects on top of the housing. The device must be placed on a solid surface with no vibration.

Hardware Installation

A USB scanner can be connected directly to the UTN server (myUTN-130).

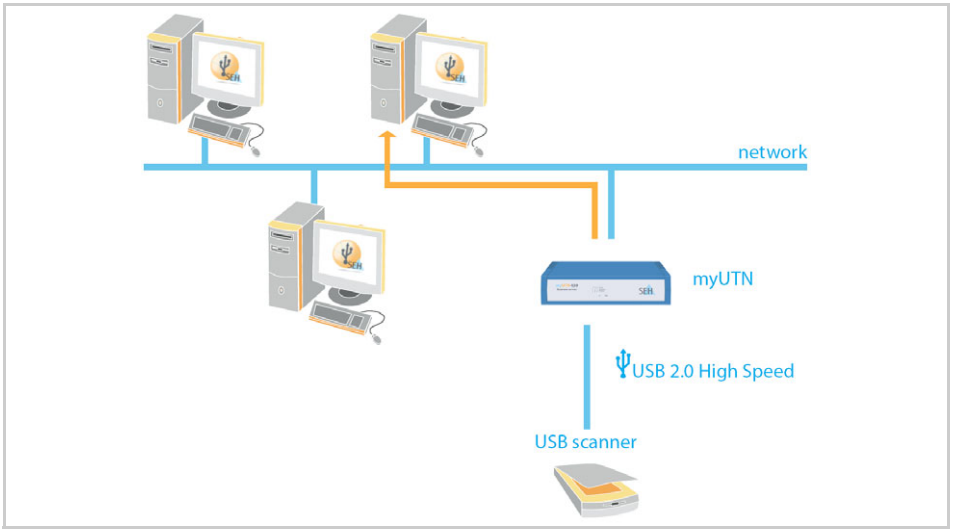

Proceed as follows:



1. *Connect the UTN server and the USB scanner with the USB data cable.*

2. *Connect the network cable (RJ-45) to the UTN server.*



3. *Connect the power cord to the UTN server.*

Software Installation

The software tool SEH UTN Manager organizes the access of the USB scanner. The SEH UTN Manager is installed on all clients that are intended to access USB scanners in the network.

The SEH UTN Manager is available in two versions:

- Single-User Version (SEH UTN Manager)
- Multi-User Version (SEH UTN Manager + SEH UTN Service)

A major difference between the single-user version and the multi-user version is the Windows service 'SEH UTN Service'. A detailed description can be found in the myUTN User Manual.

Make sure that:

- The installation of the SEH UTN Manager is suitable for Windows XP and later.
- The installation can only be carried out by Windows users with administrative rights.

First, you have to download the installation file for the SEH UTN Manager from the homepage of SEH Computertechnik GmbH:

http://www.seh-technology.com/products/usb-device-servers/products/myutn-130-downloads.html

Scan this QR code using your smart phone to get direct access to the homepage.

Proceed as follows:

1. *Start the installation file.*
2. *Follow the installation routine.*

The SEH UTN Manager is installed on your client.

Getting Started: SEH UTN Manager

After the SEH UTN Manager is started, the network will be scanned for connected UTN servers. The network range to be scanned is freely definable.

After the network scan all UTN servers found – together with the connected devices – will be shown in the 'network list'. The preferred devices will be selected and added to the 'selection list'. The devices in the selection list can be connected to the client.

This chapter describes the first steps with the program.

- 'Starting the SEH UTN Manager' ⇨🗎11
- 'Assigning an IP Address to the UTN Server' ⇨🗎12
- 'Adding the UTN Server to the Selection List' ⇨🗎13
- 'Connecting the USB Scanner to the Client' ⇨🗎14

Detailed information on how to use the SEH UTN Manager can be found in the Online Help. To start the Online Help, select **Help – Online Help** from the menu bar.

Client and UTN server communicate via the UTN port 9200. This port must not be blocked by a firewall. If necessary, you can change the port number and/or use a secure UTN SSL port. A detailed description can be found in the myUTN User Manual.

Starting the SEH UTN Manager

Start the SEH UTN Manager on your client via the Windows start menu.
(Start --> Programs --> SEH Computertechnik GmbH --> SEH UTN Manager)

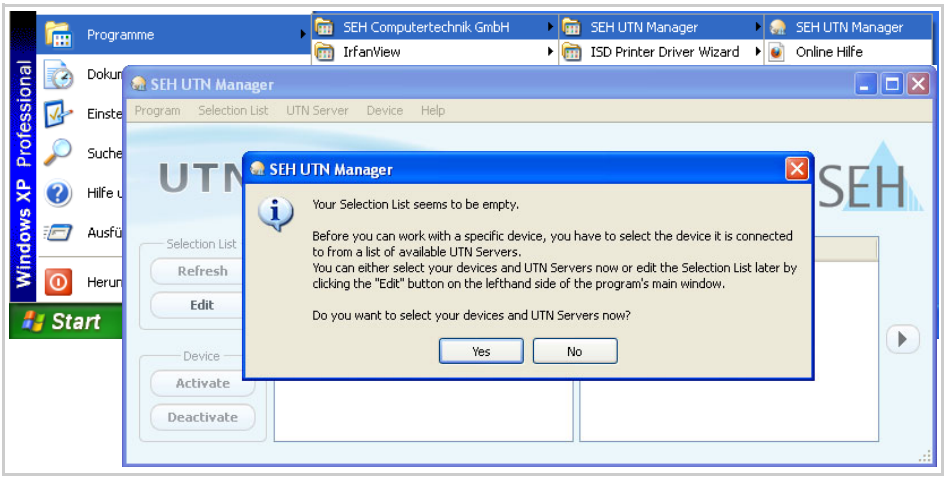
Windows XP Professional
Programme
SEH Computertechnik GmbH
IrfanView
SEH UTN Manager
ISD Printer Driver Wizard
SEH UTN Manager
Online Hilfe
Start
SEH UTN Manager
Program
Selection List
UTN Server
Device
Help
Selection List
Refresh
Edit
Device
Activate
Deactivate
SEH UTN Manager
Your Selection List seems to be empty.
Before you can work with a specific device, you have to select the device it is connected to from a list of available UTN Servers.
You can either select your devices and UTN Servers now or edit the Selection List later by clicking the "Edit" button on the lefthand side of the program's main window.
Do you want to select your devices and UTN Servers now?
Yes
No

During the initial configuration, client and UTN server must be assigned to the same local network segment.

Assigning an IP Address to the UTN Server

Once the UTN server is connected to the network, it checks whether an IP address can be obtained from the boot protocols BOOTP or DHCP. If this is not the case, the UTN server assigns itself an IP address via ZeroConf from the address range (169.254.0.0/16) which is reserved for ZeroConf.

The UTN servers found by the program will be displayed in the network list. You can change the TCP/IP parameters of the UTN server.

Proceed as follows:

1. *Confirm the note dialog 'Your Selection List seems to be empty' by clicking* **Yes**.
   If no note dialog is available and the main dialog appears, select Selection List – Edit from the menu bar.
   The **Edit Selection List** *dialog appears.*
2. *Select the UTN server from the* **network list**.
3. *Select* **Set IP Address** *from the shortcut menu.*
   The **Set IP Address** *dialog appears.*
4. *Enter the relevant TCP/IP parameters.*
5. *Click* **OK**.

The settings are saved.

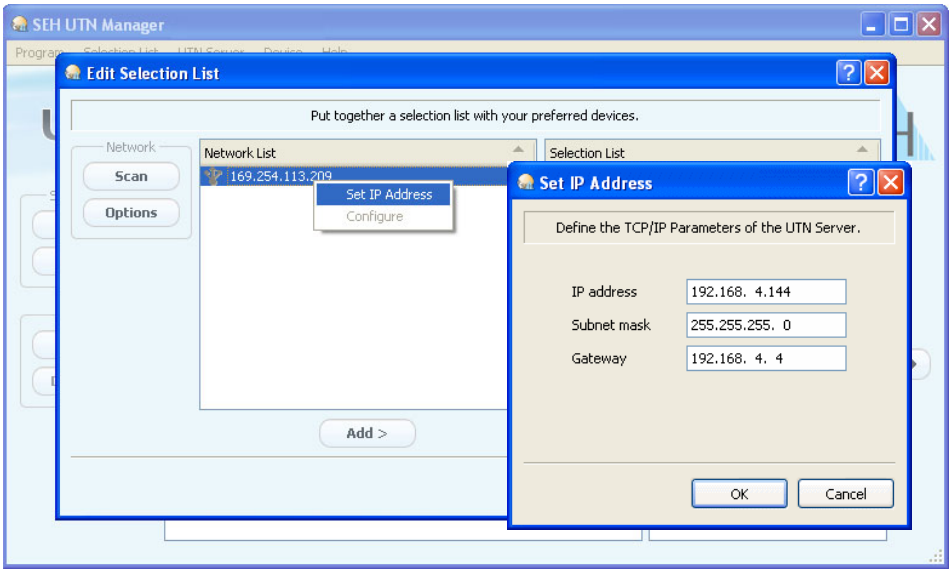

Adding the UTN Server to the Selection List

In order to connect a UTN server to a client, you must assign the UTN server to the selection list. Put together a selection list with your preferred UTN servers.

Proceed as follows:

1. *Select* **Selection List – Edit** *from the menu bar.*
   The **Edit Selection List** *dialog appears.*
2. *Select the UTN server from the network list.*
3. *Click* **Add**.
4. *Click* **OK**.

↳ The UTN servers are shown in the selection list.

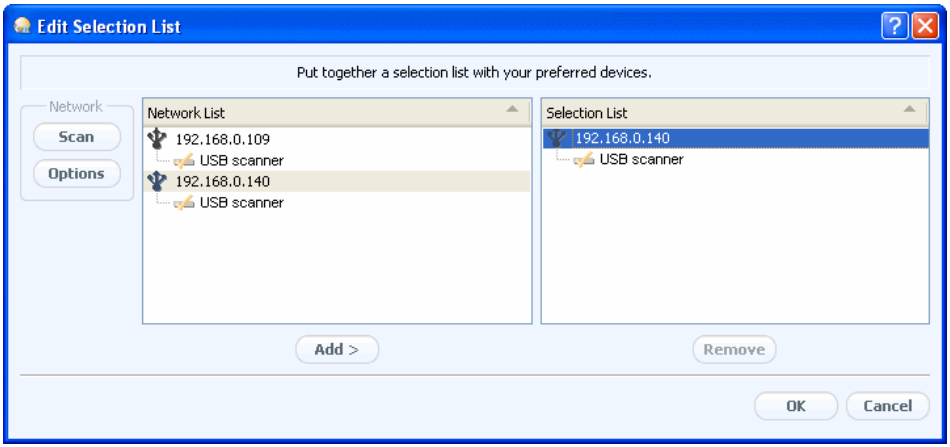

You can extend the search for UTN servers to any network range. To do this, change the search parameters for the network scan via the **Options** dialog in the **Program** menu.

Connecting the USB Scanner to the Client

The USB scanners in the selection list can be connected to the client.

Make sure that:

- All provisions (driver installation, etc.) necessary to operate the device locally (i.e. connected directly to the client) have been met on the client. Ideally, the device has been connected and operated on the client locally according to the instructions of the manufacturer.
- The device is not connected to another client. A device that was made available by the UTN server can only be used by one network participant at a time.

Proceed as follows:

1. *Highlight the device in the selection list.*
2. *Select* **Device – Activate** *from the menu bar.*

The connection will be established.

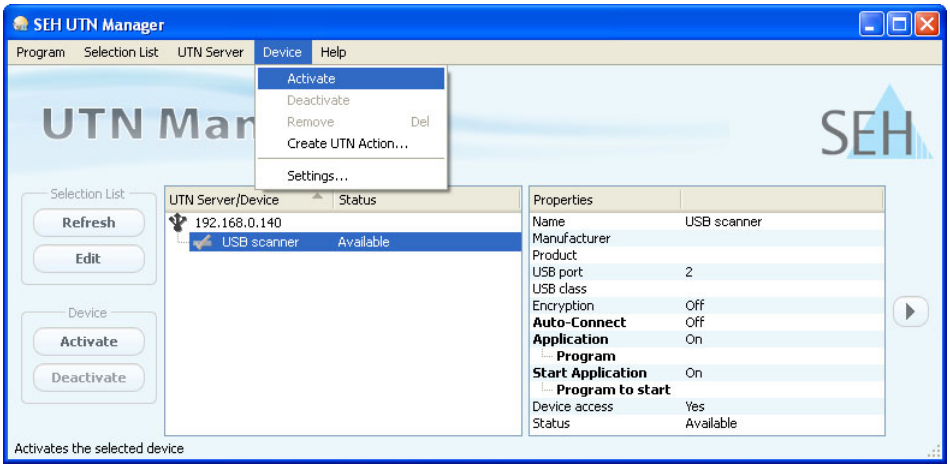

Close the connection to the device when the device is no longer needed. Select **Device – Deactivate** from the menu bar.

Configuring the UTN server

The UTN server can be configured and monitored via the myUTN Control Center. The myUTN Control Center is stored in the UTN server and can be launched by means of an Internet browser (Internet Explorer, Firefox, Safari).

Proceed as follows:

1. *Open your browser.*
2. *Enter the IP address of the UTN server as the URL.*

The myUTN Control Center will be displayed in the browser.

If the myUTN Control Center is not displayed, check the proxy settings of your browser.

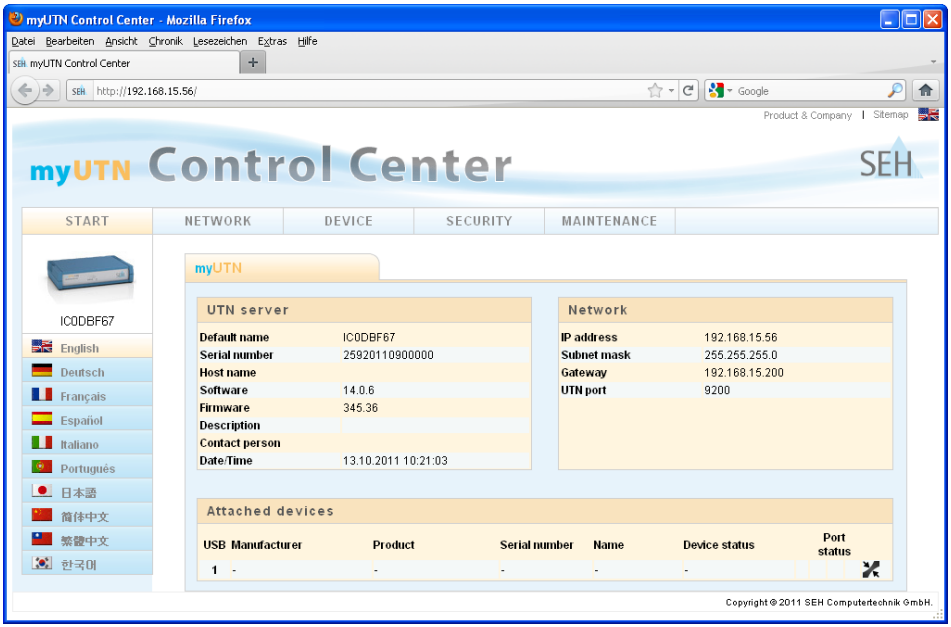

Detailed information about the configuration of the UTN server can be found in the Online Help of the myUTN Control Center. To start the Online Help, click the '?' icon.

Inhaltsverzeichnis

Allgemeine Information 18
Verwendungszweck 18
Lieferumfang 18
Technische Daten 19
LED-Anzeige 20

Sicherheitsvorschriften 21

Hardware-Installation 22

Software-Installation 23

Erste Schritte mit dem SEH UTN Manager 24
SEH UTN Manager starten 25
UTN-Server eine IP-Adresse zuweisen 26
UTN-Server der Auswahlliste hinzufügen 27
USB-Scanner mit Client verbinden 28

UTN-Server konfigurieren 29

Allgemeine Information

Verwendungszweck

Der UTN-Server 'myUTN-130' erlaubt das Bereitstellen von einem nicht-netzwerkfähigen USB-Scanner für mehrere Netzwerkteilnehmer. Dazu wird der USB-Scanner an den USB-Port des myUTN-130 angeschlossen. Die Zugriffsverteilung erfolgt über das Software-Tool 'SEH UTN Manager'.

Der SEH UTN Manager wird auf alle Clients installiert, die auf im Netzwerk bereitgestellte USB-Scanner zugreifen sollen. Der SEH UTN Manager zeigt die Verfügbarkeit aller im Netzwerk eingebundenen USB-Scanner an und stellt die Verbindung zwischen Client und USB-Scanner her.

Die Verwaltung des myUTN-130 erfolgt über das 'myUTN Control Center'.

Lieferumfang

Bitte überprüfen Sie den Packungsinhalt auf Vollständigkeit, bevor Sie die Installation beginnen:

	UTN-Server	myUTN-130 (Scannerserver)
	Quick Installation Guide	Der Quick Installation Guide beinhaltet eine kurze Beschreibung der Installation des myUTN-130. (Dieses Dokument)
	Netzteil	Externes Netzteil

Technische Daten

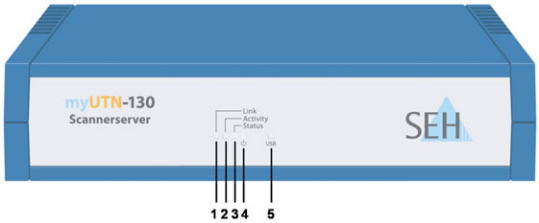

Vorderansicht

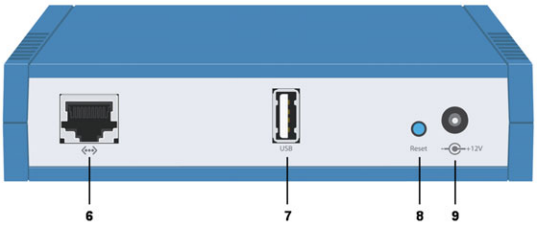

Rückansicht

1) Link-LED (grün)
2) Activity-LED (gelb)
3) Status-LED (grün)
4) Power-LED (gelb)
5) LED für den USB-Port (grün/ orange)
6) Netzwerkanschluss (RJ-45) für 1000BaseT, 100BaseTX und 10BaseT
7) USB-Port für den Anschluss des USB-Scanners
8) Status-/Reset-Taster
9) Anschluss für die Stromversorgung über das mitgelieferte Netzteil

Eigenschaften	Werte
Netzwerkanschluss Logisch: Physikalisch:	 - 10BaseT/100BaseTX/1000BaseT (IEEE 802.3) - RJ-45 (S/UTP Cat. 5)
Geräteanschluss	- 1 x USB-Scanner (über USB 2.0 HS)
Stromaufnahme	- 300 mA bei 12 VDC (ohne Last) - 600 mA bei 12 VDC (bei Volllast auf dem USB-Port)
Betriebsumgebung	- Umgebungstemperatur: 5 - 40 °C - Relative Luftfeuchtigkeit: 20 - 80 %
Abmessungen	- Breite: 140 mm - Höhe: 32 mm - Tiefe: 99 mm - Gewicht: 140 g

LED-Anzeige

Durch die Interpretation des LED-Leuchtverhaltens kann der Zustand des UTN-Servers ermittelt werden.

LED	Aktion	Farbe	Beschreibung
Link	Dauer-An	grün	Signalisiert eine vorhandene Verbindung zum Netzwerk.
	Dauer-Aus	-	Signalisiert, dass keine Verbindung zum Netzwerk besteht.
Activity	unregelmäßiges Blinken	gelb	Signalisiert den Empfang von Datenpaketen.
Status	Dauer-Aus	-	Bei gleichzeitigem zyklischen Blinken der Activity-LED wird der BIOS-Modus signalisiert.
	3 x Blinken	grün	Signalisiert die Vergabe einer ZeroConfig-IP-Adresse.
	2 x Blinken	grün	Signalisiert die Vergabe einer IP-Adresse, die nicht 0.0.0.0 entspricht oder aus dem Bereich ZeroConfig kommt.
Power	Dauer-An	gelb	Signalisiert, dass das Gerät mit Strom versorgt wird.
	Dauer-Aus	-	Signalisiert, dass das Gerät nicht mit Strom versorgt wird.
USB-Port	Dauer-Aus	-	Es ist kein USB-Scanner am USB-Port angeschlossen.
	Dauer-An	grün	Es ist ein USB-Scanner am USB-Port angeschlossen.
	Dauer-An	orange	Der USB-Scanner am USB-Port ist eingebunden.

Sicherheitsvorschriften

UTN-Server sind Netzwerkgeräte für den Gebrauch in Büroumgebungen. Der myUTN-130 dient dem Einbinden von USB-Scannern in TCP/IP-Netzwerken.

Beachten Sie vor Inbetriebnahme und beim Betrieb des UTN-Servers die folgenden Sicherheitsvorschriften, um sich und andere vor Personenschäden zu schützen sowie Beschädigungen am Gerät zu vermeiden.

- Lesen Sie die Dokumentation und stellen Sie sicher, dass Ihr System den aufgeführten Anforderungen entspricht.
- Das Gerät darf nicht mit Feuchtigkeit oder Flüssigkeit in Berührung kommen.
- Das Gerät darf nur in unversehrtem Zustand angeschlossen und betrieben werden.
- Verlegen Sie alle Kabel so, dass niemand darauf treten oder darüber stolpern kann.
- Schließen Sie keine Telefonleitungen an den RJ-45-Stecker an. An diesen darf nur Sicherheitskleinspannung angeschlossen werden. Verwenden Sie für den Anschluss an den RJ-45 Stecker nur S/UTP-Kabel (Kategorie 5 oder besser). Kabelschirm und Steckerschirm des Kabels müssen flächig verbunden sein.
- Das Gerät darf nur mit dem mitgelieferten Netzteil betrieben werden.
- Verwenden Sie als USB-Kabel ein zertifiziertes USB-Kabel (< 3 m), das unter www.usb.org gelistet ist.
- Öffnen Sie nicht das Gehäuse. Stellen Sie keine Gegenstände auf das Gehäuse. Das Gerät muß auf einer stabilen, vibrationsarmen Oberfläche stehen.

Hardware-Installation

Am UTN-Server (myUTN-130) kann ein USB-Scanner direkt angeschlossen werden.

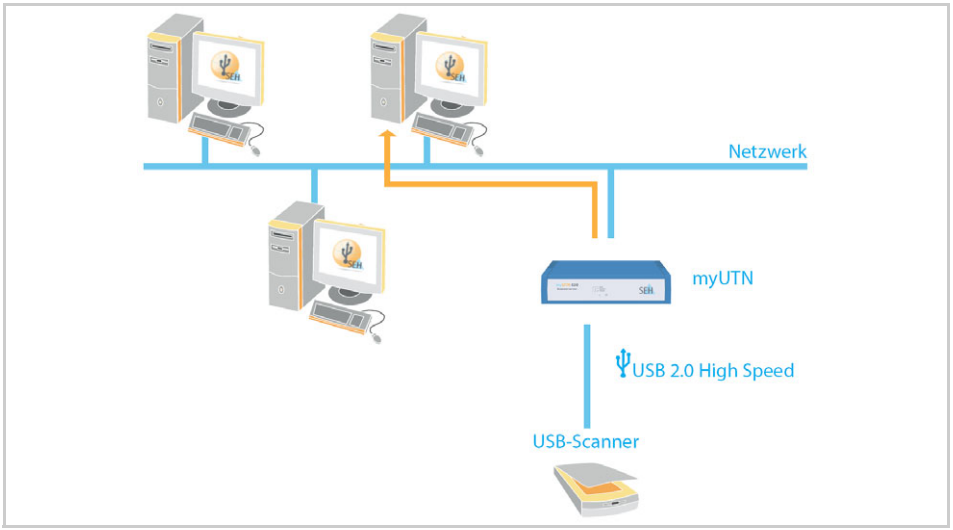

Gehen Sie wie folgt vor:



1. *Verbinden Sie den UTN-Server und den USB-Scanner mit dem USB-Datenkabel.*

2. *Verbinden Sie das Netzwerkkabel (RJ-45) mit dem UTN-Server.*



3. *Verbinden Sie das Netzkabel mit dem UTN-Server.*

Software-Installation

Die Zugriffsverteilung des USB-Scanners wird über das Software-Tool SEH UTN Manager organisiert. Der SEH UTN Manager wird auf alle Clients installiert, die auf im Netzwerk bereitgestellte USB-Scanner zugreifen sollen.

Der SEH UTN Manager ist in zwei Varianten verfügbar:

- Single-User-Variante (SEH UTN Manager)
- Multi-User-Variante (SEH UTN Manager + SEH UTN Service)

Wesentlicher Unterschied zwischen der Single-User- und der Multi-User-Variante ist der Windows-Dienst 'SEH UTN Service'. Detaillierte Beschreibungen finden Sie in der myUTN-Benutzerdokumentation.

☑ Stellen Sie folgende Punkte sicher:

- Die Installation des SEH UTN Managers ist für Windows XP und höher geeignet.
- Die Installation kann ausschließlich durch Windows-Benutzer mit administrativen Rechten durchgeführt werden.

Bitte laden Sie zuerst die Installationsdatei für den SEH UTN Manager von der SEH Computertechnik GmbH-Homepage:

http://www.seh.de/produkte/usb-device-server/products/myutn-130-downloads.html

Scannen Sie diesen QR-Code mit Ihrem Smartphone, um direkt zur Homepage zu gelangen.

Gehen Sie wie folgt vor:

1. *Starten Sie die Installationsdatei.*
2. *Folgen Sie der Installationsroutine.*

↳ Der SEH UTN Manager wird auf Ihrem Client installiert.

Erste Schritte mit dem SEH UTN Manager

Nach dem Start des SEH UTN Managers wird das Netzwerk nach angeschlossenen UTN-Servern gescannt. Der zu scannende Netzwerkbereich ist frei definierbar.

Nach dem Netzwerkscan werden alle gefundenen UTN-Server und deren angeschlossene Geräte in der 'Netzwerkliste' angezeigt. Die benötigten Geräte werden ausgewählt und der 'Auswahlliste' hinzugefügt. Die in der Auswahlliste aufgeführten Geräte können dann mit dem Client verbunden werden.

Dieses Kapitel informiert über die ersten Handlungsschritte mit dem Programm.

- 'SEH UTN Manager starten' ⇨🗎25
- 'UTN-Server eine IP-Adresse zuweisen' ⇨🗎26
- 'UTN-Server der Auswahlliste hinzufügen' ⇨🗎27
- 'USB-Scanner mit Client verbinden' ⇨🗎28

Detaillierte Informationen zur Bedienung des SEH UTN Managers entnehmen Sie der Online Hilfe. Um die Online Hilfe zu starten, wählen Sie im Menü **Hilfe** den Befehl **Online Hilfe**.

Client und UTN-Server kommunizieren über den UTN-Port 9200. Dieser Port darf nicht durch eine Sicherheitssoftware (Firewall) blockiert werden. Bei Bedarf kann die Portnummer geändert werden und/oder ein sicherer UTN-SSL-Port verwendet werden. Detaillierte Beschreibungen finden Sie in der myUTN-Benutzerdokumentation.

SEH UTN Manager starten

Starten Sie auf Ihrem Client den SEH UTN Manager über das Windows-Startmenü.
(Start --> Programme --> SEH Computertechnik GmbH --> SEH UTN Manager)

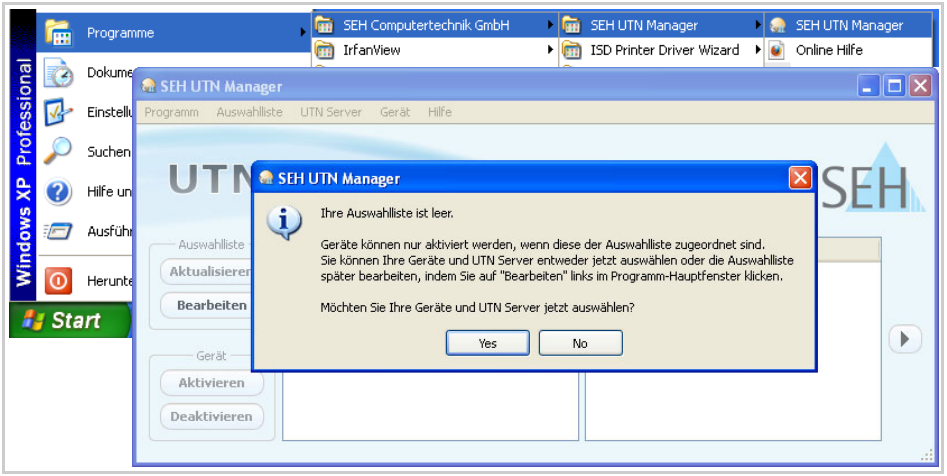

Während der Erstkonfiguration müssen Client und UTN-Server demselben lokalen Netzwerksegment zugeordnet sein.

UTN-Server eine IP-Adresse zuweisen

Nachdem der UTN-Server an das Netzwerk angeschlossen ist, überprüft der UTN-Server, ob er eine IP-Adresse über die Bootprotokolle BOOTP oder DHCP erhält. Ist das nicht der Fall, gibt sich der UTN-Server über ZeroConf selbst eine IP-Adresse aus dem für ZeroConf reservierten Adressbereich (169.254.0.0/16).

Die vom Programm gefundenen UTN-Server werden in der Netzwerkliste angezeigt. Sie haben die Möglichkeit, die TCP/IP-Parameter am UTN-Server zu ändern.

Gehen Sie wie folgt vor:

1. *Bestätigen Sie den Hinweisdialog 'Auswahlliste ist leer' mit* **Ja**.
   Falls kein Hinweisdialog vorhanden ist und der Hauptdialog angezeigt wird, wählen Sie im Menü Auswahlliste den Befehl Bearbeiten.
   Der Dialog **Auswahlliste bearbeiten** *erscheint.*
2. *Markieren Sie den UTN-Server in der* **Netzwerkliste**.
3. *Wählen Sie* **IP-Adresse definieren** *im Kontextmenü.*
   Der Dialog **IP-Adresse definieren** *erscheint.*
4. *Geben Sie die entsprechenden TCP/IP-Parameter ein.*
5. *Wählen Sie die Schaltfläche* **OK** *an.*

Die Einstellungen werden gespeichert.

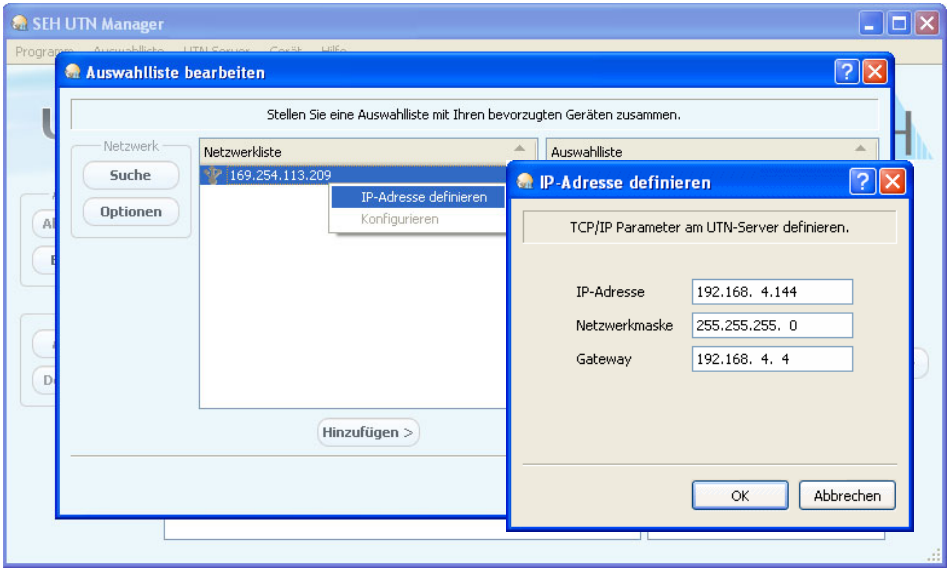

UTN-Server der Auswahlliste hinzufügen

Um einen UTN-Server mit dem Client zu verbinden, muss der UTN-Server der Auswahlliste zugeordnet werden. Stellen Sie die Auswahlliste mit Ihren bevorzugt genutzten UTN-Servern zusammen.

Gehen Sie wie folgt vor:

1. *Wählen Sie im Menü* **Auswahlliste** *den Befehl* **Bearbeiten**.
   Der Dialog **Auswahlliste bearbeiten** *erscheint.*
2. *Markieren Sie den UTN-Server in der Netzwerkliste.*
3. *Wählen Sie die Schaltfläche* **Hinzufügen** *an.*
4. *Wählen Sie die Schaltfläche* **OK** *an.*

Die UTN-Server werden in der Auswahlliste angezeigt.

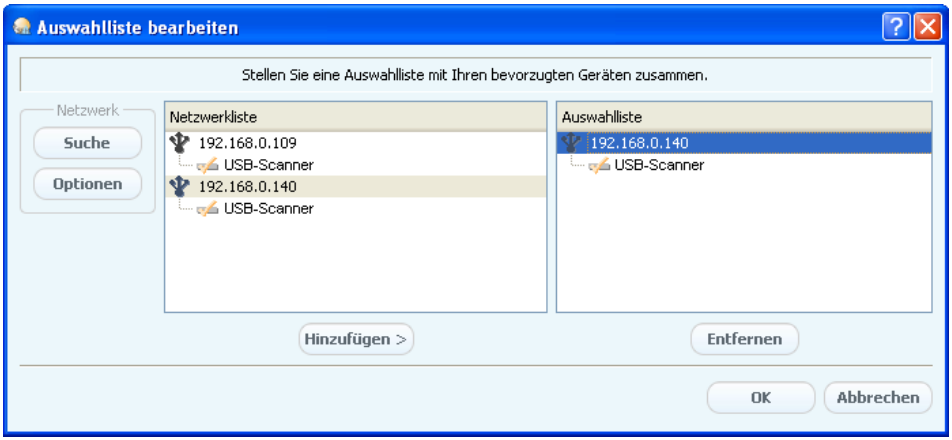

Die Suche nach UTN-Servern kann auf beliebige Netzwerkbereiche erweitert werden. Ändern Sie hierzu die Suchparameter für den Netzwerkscan im Menü **Programm** über den Dialog **Optionen**.

USB-Scanner mit Client verbinden

In der Auswahlliste aufgeführte USB-Scanner können mit dem Client verbunden werden.

Stellen Sie folgende Punkte sicher:

- Auf dem Client sind alle Vorbereitungen (Treiberinstallation usw.) getroffen worden, die notwendig wären, um das Gerät lokal (also direkt am Client angeschlossen) zu betreiben. Idealerweise ist das Gerät zuvor lokal am Client nach der Anleitung des Herstellers angeschlossen und betrieben worden.
- Das Gerät ist nicht bereits mit einem anderen Client verbunden. Ein über den UTN-Server zur Verfügung gestelltes Gerät kann zeitgleich nur von einem Netzwerkteilnehmer genutzt werden.

Gehen Sie wie folgt vor:

1. *Markieren Sie das Gerät in der Auswahlliste.*
2. *Wählen Sie im Menü* **Gerät** *den Befehl* **Aktivieren**.

Die Verbindung wird hergestellt.

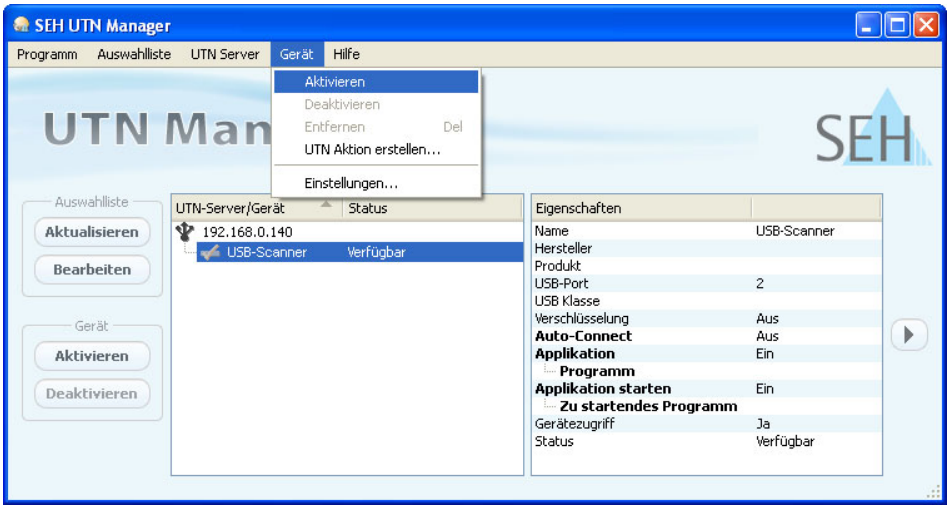

Deaktivieren Sie die Verbindung zum Gerät, sobald Sie es nicht mehr benötigen. Wählen Sie hierzu im Menü **Gerät** den Befehl **Deaktivieren**.

UTN-Server konfigurieren

Über das 'myUTN Control Center' kann der UTN-Server konfiguriert und überwacht werden. Das myUTN Control Center ist in dem UTN-Server gespeichert und kann mit einem Internet-Browser (Internet Explorer, Firefox, Safari) aufgerufen werden.

Gehen Sie wie folgt vor:

1. *Öffnen Sie Ihren Browser.*
2. *Geben Sie als URL die IP-Adresse des UTN-Servers ein.*

Das myUTN Control Center wird im Browser dargestellt.

Falls das myUTN Control Center nicht angezeigt wird, überprüfen Sie die Proxy-Einstellungen Ihres Browsers.

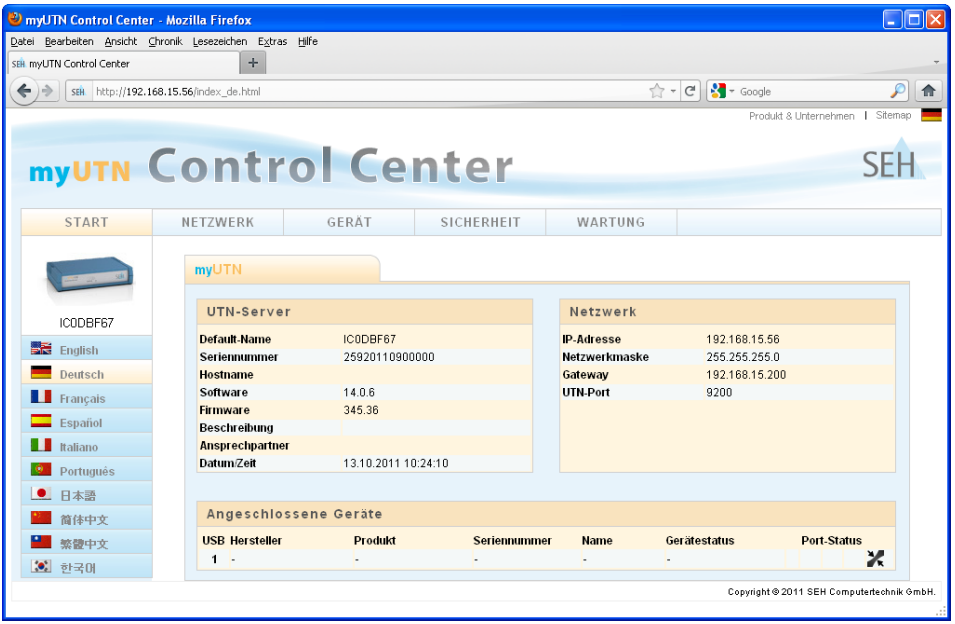

Detaillierte Informationen zur Konfiguration des UTN-Servers entnehmen Sie der Online Hilfe des myUTN Control Centers. Um die Online Hilfe zu starten, wählen Sie das '?' Symbol an.

The latest version of the EC declaration of conformity can be downloaded from the homepage of SEH Computertechnik GmbH:
http://www.seh-technology.com/services/ce-notification.html

Manufacturer's Name
SEH Computertechnik GmbH

Manufacturer's Address
Suedring 11
33647 Bielefeld
Germany
Phone ++49 (0) 521 - 94226-0

EC – Declaration of Conformity

Herewith SEH Computertechnik GmbH declares that

Product: **Scannerserver**

Type designation: **myUTN-130**

Serial No.: 259 yyyy mm nnnnn (yyyy = year, mm = month, nnnnn = seq. no.)

is in conformity with the provisions of the
DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF DEC. 15, 2004

DIRECTIVE 2005/32/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of July 6, 2005

COMMISSION REGULATION (EC) No 278/2009 of April 6, 2009

Standards applied:

EN 55024:1998 +A1:2001 +A2:2003 and
EN 55022:2006 +A1:2007 Class A
EN 62301 First Edition

The named device is not intended primarily for use in domestic environments.
To meet the above specifications, the user has to comply with all instructions defined in the enclosed manual *Quick Installation Guide*.

Bielefeld, September 1, 2011

Dipl.-Ing. Rainer Ellerbrake, General Manager

Federal Communication Commission (FCC) Notice

The user has to comply with all instructions defined in this manual. It is not allowed to do product modifications not expressly approved by SEH.

Note:
This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Manufactured by:
SEH Computertechnik GmbH
Suedring 11
33647 Bielefeld
Germany
Phone: +49 (0)521 94226-29
Fax: +49 (0)521 94226-99
Support: +49 (0)521 94226-44
Email: info@seh.de
Web: http://www.seh.de

Scan this QR code (meCard) using your smart phone.

Document:
Type: Quick Installation Guide
Title: myUTN-130
Version: 1.0
Order number: MHAB-QI-myUTN130

Online Links to important Internet Resources:

Support Contacts and Information:	http://www.seh-technology.com/support
Sales Contacts and Information:	http://www.seh-technology.com/sales
Downloads:	http://www.seh-technology.com/services/downloads.html

CE

© 2011 SEH Computertechnik GmbH
All trademarks, registered trademarks, logos and product names are property of their respective owners.
This product uses 'Open Source Software'. For further information, please contact http://www.seh.de.
The product documentation gives you valuable information about your product.
Keep the documentation for further reference during the life cycle of the product.